HP Anyware Work From Home Guide

24.07

HP Anyware Work From Home Guide Table of Contents

Table of Contents

HP Anyware Work-From-Home Rapid Response Guide	4
Scope	4
Does the PCoIP technology meet my needs?	4
Where to Start?	4
This might actually work! What should I do next?	5
Welcome to HP Anyware Solutions	5
New to HP Anyware Solutions Q&A	6
Work-from-Home options for Standalone Computers	7
Graphics Workstations with NVIDIA Quadro and Tesla GPUs	7
Other Standalone Computers running Windows with consumer grade GPUs	7
Other Standalone Computers running Linux with consumer grade GPUs	7
Security Considerations for Graphics-based Deskside Computers	7
Usability and Performance of Standalone Computers using Anyware Standard Agent	8
Work-from-Home options with Remote Workstation Cards	8
VPN Option	8
VPN Deployment for Remote Workstation Card	9
NAT Option	10
NAT Deployment for Remote Workstation Card	10
Avoid a VPN by using Cloud Access Software	11
Direct Connect Considerations	11
Work-from-Home options using Anyware Management Console	11
Work-from-Home options with Cloud Access Software	12
Architecture Considerations	13
Internet Access Strategy and Connection Management	13
Local Monitor Security Considerations	13
Load Balancing Considerations	14

HP Anyware Work From Home Guide Table of Contents

Public Cloud Deployment Options Work-from-Home options for VMware Horizon VMware Horizon Work from Home Work-from-Home options for Amazon WorkSpaces with Anyware Zero Clients Future Disaster Recover (DR) Strategy and Planning Performance Tips for Work-from-Home Use Cases Video editorial vs. Text editorial use cases Additional Resources	Deployment Steps	14
Work-from-Home options for VMware Horizon VMware Horizon Work from Home 15 Work-from-Home options for Amazon WorkSpaces with Anyware Zero Clients Future Disaster Recover (DR) Strategy and Planning Performance Tips for Work-from-Home Use Cases Video editorial vs. Text editorial use cases Additional Resources	Anyware Manager Deployment Scripts	14
VMware Horizon Work from Home 15 Work-from-Home options for Amazon WorkSpaces with Anyware Zero Clients Future Disaster Recover (DR) Strategy and Planning Performance Tips for Work-from-Home Use Cases Video editorial vs. Text editorial use cases Additional Resources	Public Cloud Deployment Options	15
Work-from-Home options for Amazon WorkSpaces with Anyware Zero Clients Future Disaster Recover (DR) Strategy and Planning Performance Tips for Work-from-Home Use Cases Video editorial vs. Text editorial use cases Additional Resources	Work-from-Home options for VMware Horizon	15
Future Disaster Recover (DR) Strategy and Planning Performance Tips for Work-from-Home Use Cases Video editorial vs. Text editorial use cases Additional Resources	VMware Horizon Work from Home	15
Performance Tips for Work-from-Home Use Cases Video editorial vs. Text editorial use cases Additional Resources	Work-from-Home options for Amazon WorkSpaces with Anyware Zero Clients	16
Video editorial vs. Text editorial use cases Additional Resources	Future Disaster Recover (DR) Strategy and Planning	16
Additional Resources 19	Performance Tips for Work-from-Home Use Cases	16
	Video editorial vs. Text editorial use cases	17
How To Buy 20	Additional Resources	19
	How To Buy	20

HP Anyware Work-From-Home Rapid Response Guide

For access to the full HP Anyware product documentation visit HP Anyware Support.

Scope

This guide enables IT administrators to rapidly determine if HP offers any immediate solutions to your pressing corporate work-from-home demands. All options are summarized and linked to detailed resources to help you get going as quickly as possible.

Does the PCoIP technology meet my needs?

The PCoIP protocol is highly trusted and broadly deployed with over 13 million endpoints across many industries including Media and Entertainment, Finance, Governments, CAE, Healthcare, IT and many others!

HP Anyware products have a significant footprint in industries that demand ultra-secure remote access to standard desktops or workstations delivering graphics intensive workloads. We have customers across all sectors initiating work-from-home initiatives at short notice. In particular, companies in the Media and Entertainment Industry rely on PCoIP Protocol to meet Motion Picture Association of America (MPAA) content security best practices or to maintain Trusted Partner Network (TPN) compliance.

Where to Start?

- If you're new to PCoIP technology, start here.
- If you're wanting remote access to any standalone corporate computers, start here.
- If you're already using Remote Workstation Cards and Anyware Zero Clients, start here.

- If you're already using the Anyware Management Console, start here.
- If you're already using Cloud Access Software, start here.
- If you're already using Zero Clients with VMware Horizon, start here.
- If you're already using Zero Clients with Amazon WorkSpaces, start here.
- If you are looking for performance tips to optimize your Cloud Access Software deployment for work-from-home access, start here.
- For detailed instructions on using Cloud Access Software for standalone computers, see this <u>KB</u> article.
- For detailed instructions on using Cloud Access Software for consumer grade NVIDIA GPUs (e.g. GeForce RTX 2080), see this <u>KB article</u>.

To get started immediately, Cloud Access (standard) or Cloud Access Plus (graphics) licenses can be purchased by credit card from the HP Anyware website. For larger deployments, please contact HP Anyware Sales or a HP Anyware reseller.

This might actually work! What should I do next?

There are links to additional resources at the end of this guide, including security and performance considerations, customer stories, reference architectures, technical guides, licensing options and HP Anyware contact information.

Welcome to HP Anyware Solutions

Cloud Access Software enables remote access to Windows or Linux based computers including:

- Physical workstations or standalone computers (either deskside or centralized).
- Virtual workstations on VMware ESXi; KVM or Nutanix AHV Hypervisors.
- Non-graphics virtual desktops on VMware ESXi; RedHat KVM or Nutanix AHV Hypervisors.
- Remote workstations that reside on the public cloud.

Using Cloud Access Software, a small software agent is installed on any of the above 'host' computer variants. The host computer then uses the PCoIP protocol to communicate with a client device in a remote location over a LAN, WAN or public internet. The client device is connected to display, keyboard, mouse and peripheral devices such as Wacom devices, and is what end users interact with.

HP Anyware also offers a well-established range of PCle cards, called **Remote Workstation Cards**, that plug into physical workstations and convert the DVI or DisplayPort signals into the same PColP protocol used by Cloud Access Software. Remote Workstation Cards are excellent for LAN environments and support a broad range of GPUs, including consumer and professional variants. However, they are less flexible than Cloud Access Software for Work-from-Home deployments. Firstly, you'd need to procure and install the hardware which might lengthen your deployment schedule. You'll also need to establish VPN access for all remote users which may not be viable.

New to HP Anyware Solutions Q&A

How much does it cost?

Check out our web page on All Access Software Plans.

Which GPUs are supported for high performance requirements?

- See "System Requirements" in the Windows Graphics Agent Administrators' Guide
- See "System Requirements" in the Linux Graphics Agent Administrators' Guide
- See "System Requirements" in the macOS Graphics Agent Administrators' Guide

What if I have a different graphics card or integrated graphics?

Cloud Access Software can be used for remote access to a variety of other computers and graphics cards, for example NVIDIA GeForce graphics card, subject to some performance constraints. See this KB article for more information.

What are the endpoint options for my users?

Anyware Software clients are available for Windows, macOS, and Linux and can be installed on laptops or PCs. Standalone hardware clients such as Anyware Zero Clients and Anyware Thin Clients are offered by many vendors.

Work-from-Home options for Standalone Computers

Graphics Workstations with NVIDIA Quadro and Tesla GPUs

Cloud Access Software has longstanding support for select non-virtualized Windows or Linux workstations as called out in the GPU Requirements of the agent guides. For more information, see the agent guides in the <u>HP Anyware Support</u>.

Other Standalone Computers running Windows with consumer grade GPUs

To support our many customers with an urgent need for remote access to standalone or deskside corporate computers with consumer grade graphics, please review the following <u>KB article</u>.

Other Standalone Computers running Linux with consumer grade GPUs

The best option for remote access to standalone Linux workstations is to use Remote Workstation Cards in conjunction with a VPN, as described in "Connecting from a PCoIP Zero Client" in the Remote Workstation Card Administrators Guide.

Security Considerations for Graphics-based Deskside Computers

When remote access is provided to a workstation or computer using the Anyware Graphics Agent, its local monitors remain active and visible to bystanders during the remote session which poses a local security risk. Local keyboards and mice also remain active and usable by anyone standing near them.

To mediate this risk, HP Anyware recommends that you:

- Turn off local monitors and leave them attached or disconnect local monitors and replace them with virtual monitor dongles, as described in the following KB article.
- Unplug the local keyboard and mouse.

Usability and Performance of Standalone Computers using Anyware Standard Agent

When remote access is provided to a standalone computer using the Anyware Standard Agent, it can only be operated via a Anyware client. Local operation of the computer is not possible until the Anyware Standard Agent is removed. Monitor security is not a concern in this case because the local display system is disabled during a remote session. No virtual monitor emulation is needed.

GPU-dependent Applications

The Anyware Standard Agent cannot make use of GPUs, so any GPU-dependent applications running on a standalone PC will not function properly. If you have GPU-dependent workloads, you must use the Anyware Graphics Agent.

HP Anyware also recommends unplugging your local keyboard and mouse which remain active during a remote session.

For instructions on how to use Cloud Access Software with Standalone Computers, see the following KB article.

Work-from-Home options with Remote Workstation Cards

	VPN Access	Public Internet Access
Windows	<u>Described here</u>	Disconnect Remote Workstation Card and use Cloud Access Software
Linux	<u>Described here</u>	Disconnect Remote Workstation Card and use Cloud Access Software*

^{*}This does not apply to workstations with consumer grade GPUs.

VPN Option

A VPN enables external connections to an enterprise-based workstation with Remote Workstation Card by extending the corporate network to the home environment over a secure connection. The

decision to deploy a VPN should be weighed against alternative approaches such as using Cloud Access Software. Anyware connections and communications are inherently secure so adding a VPN may unnecessarily expose corporate infrastructure.

It also add licensing costs and may degrade the performance of the remote desktop. When deploying a Anyware Zero Client in a work-from-home scenario, home users would require a home router with VPN support because a Anyware Zero Client has no operating system and is therefore unable to terminate a VPN connection. A home PC with VPN software and a Anyware Software Client provides an alternative to using a Anyware Zero Client with a VPN router. Follow security best practices when deploying VPN infrastructure.

The US Federal Government publishes useful guidelines here and here.

VPN Deployment for Remote Workstation Card

The following points detail prerequisite information you should follow when setting up your Remote Workstation Card for VPN deployment:

- Install and license the Remote Workstation Card Agent (which provides connection broker functions). See the Windows or Linux RWC Administrators 'Guide.
- Install the Remote Workstation Card Software.
- Ensure that the Remote Workstation Card and host computer are connected on the same local network.
- Have a hardware VPN device on the hardware endpoint host network. (The Anyware Software Client can use a software VPN connecting to the host network).

Deployment Steps

- Create a VPN between your home network device and office. See your network devices
 documentation for instructions on how to create a hardware VPN. Home users with Anyware
 Software Clients can use a software VPN solution that connects to their office.
- 2. Connect your client to your Remote Workstation Card:
 - Configure your Zero Client session type to <u>Direct to host</u> using:
 - The Remote Workstation Card IP address.
 - The host IP address when the Remote Workstation Card Agent is installed.

HP Anyware Work From Home Guide NAT Option

3. If you are using a Anyware Software Client, configure with the host PC IP address in the Host Address or Code field.

4. Connect as normal.

After authentication and brokering, the Remote Workstation Card Agent passes control to the Remote Workstation Card directly, which enables a direct connection of PCoIP traffic between the Remote Workstation Card and the Anyware Client.

NAT Option

This option requires a NAT device that can port forward from a source WAN IP address. It offers less overhead than the VPN option thus allowing for a limited performance increase. Similarly to VPN solutions, NAT solutions require additional networking expertise and should be weighed against alternative approaches such as HP Anyware Cloud Access Software.

NAT Deployment for Remote Workstation Card

The following points detail prerequisite information you should follow when setting up your Remote Workstation Card for deployment with a NAT device:

- Ensure ports 4172 and 443 are open for TCP and UDP communications.
- If you are using the Remote Workstation Card Agent for Windows, add the following registry to HLM\SOFTWARE\Policies\Teradici\PCoIP\pcoip_admin:

```
pcoip.client_connection_address REF_SZ
```

• If you are using the Remote Workstation Card Agent for Linux, the pcoip.client_connection_address must be set to the WAN address of the Remote Workstation Card in the host PC /etc/Teradici/pcoip-agent.conf file.

Deployment Steps

- 1. Configure the corporate NAT device to forward PCoIP traffic from each client static WAN IP address to either:
 - The dedicated Remote Workstation Card IP address (Zero Client)

- The dedicated host PC IP address and the dedicated Remote Workstation Card IP address if the Remote Workstation Card Agent is installed (Zero Client or Anyware Software Client).
- 2. Configure the client connections to point to the provided corporate WAN IP using either your Anyware Zero Client or Anyware Software Client:
 - Use Anyware Zero Client session type Direct to Host.
 - Configure your Software Client with the host PC IP address in the Host Address or Code field.
- 3. Connect as normal.

Avoid a VPN by using Cloud Access Software

The Remote Workstation Card can only be used outside your firewall via a VPN or NAT. In scenarios where a VPN is not available, or the complexity and expense of adding new VPN infrastructure is prohibitive, HP Anyware strongly recommends Cloud Access Software as an alternative. Besides avoiding the complexities and expense of new VPN infrastructure, Cloud Access Software offers the benefits of connection management, user entitlements and multifactor authentication.

Direct Connect Considerations

As of Cloud Access Software release 2020.01, direct connections from Anyware Clients to Remote Workstation Card machines must be made to the host computer's IP address or FQDN. In previous versions, connections were made directly to the Remote Workstation Card; this connection method is no longer supported.

Work-from-Home options using Anyware Management Console

If you are an IT Administrator using Management Console on your corporate network, you can easily allow your Anyware Zero Clients or Remote Workstation Cards be moved to your employees home network and continue to manage them via the Management Console as long as you are using DNS to provision your endpoints. For <u>Anyware Management Console Remote Endpoint Management</u> perform the following tasks:

1. Configure the Anyware Management Console reverse proxy.

2. Connect the Remote Workstation Card or Anyware Zero Client to your home network.


Follow the instructions in the "Connecting to a remote endpoint" in the Management Console Guide.

VPN or NAT Configuration

You will only be able to successfully peer endpoints after you have configured a VPN or NAT environment.

Work-from-Home options with Cloud Access Software

The following image outlines a top level architecture of the Work-from-Home scenario with Cloud Access Software.

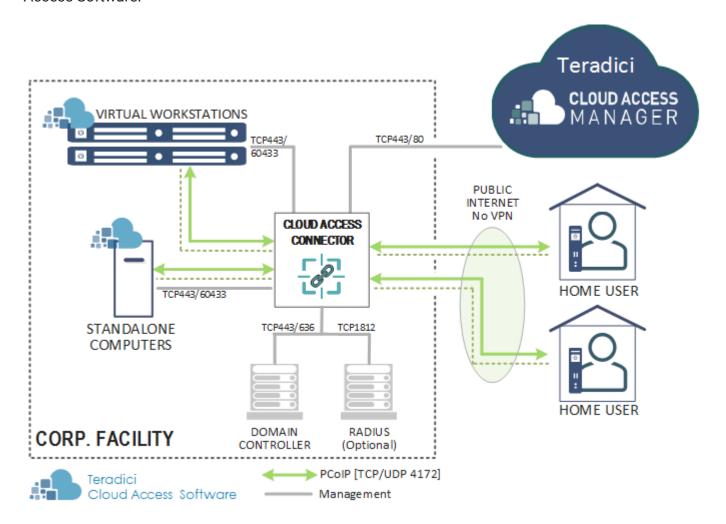

HP Anyware Work From Home Guide Architecture Considerations

Architecture Considerations

Ensure the virtual workstations and/or standalone host computer meets the system requirements as detailed in Cloud Access Software Administration Guides:

	WINDOWS	LINUX
Graphics Workstation - Anyware Graphics Agent	<u>System</u> <u>Requirements</u>	System Requirements
Virtualized Non-Graphic - Anyware Standard Agent	System Requirements	System Requirements
Standalone Computer - Consumer Graphics	<u>Guidelines</u>	Guidelines
Virtualized and standalone computers with Quadro and Tesla NVIDIA GPUs - Anyware Graphics Agent	System Requirements	System Requirements
Virtualized desktops with no discrete GPUs - Anyware Standard Agent	System Requirements	System Requirements
Standalone computers with consumer grade NVIDIA GPUs (eg. GeForce RTX 2080) - Anyware Graphics Agent	Guidelines	Use Remote Workstation Card
Standalone computers with no discrete GPUs - Anyware Standard Agent	Guidelines	<u>Guidelines</u>

Internet Access Strategy and Connection Management

Decide whether the host computer will be accessed from home via VPN or public internet. HP Anyware highly recommends using Anyware Manager and associated Anyware Connector components which offer security gateway features and multifactor authentication integrated with connection management and user assignment capabilities. While a VPN offers 'direct connect' capabilities for a small set of users, licensing costs and scalability are deterrents to scalability. Scalability is more easily achieved using Cloud Access Manager or a third party connection broker such as the Leostream broker.

Local Monitor Security Considerations

If relevant, pay attention to the considerations discussed for standalone computers

Load Balancing Considerations

For larger deployments, it is recommended that multiple Cloud Access Connectors are deployed behind a load balancer. Consult the Cloud Access Architecture Guide for details.

Deployment Steps

Detailed Deployment Steps for Cloud Access Software are described in respective Windows and Linux Administration Guides for Graphics and Standard Anyware Agents respectively. Instructions for using Cloud Access Manager with an on-premises deployment are detailed in the <u>Cloud Access Manager Administration Guide</u>. Cloud Access Manager enables highly-scalable and cost-effective Cloud Access Software deployments by managing cloud compute costs and brokering PCoIP connections to remote workstations. The high-level deployment process is as follows:

- 1. Procure Cloud Access Software licenses.
- 2. Install the necessary GPU drivers (if required depending on need).
- 3. Install the appropriate Cloud Access Software Agent and activate the Cloud Access Software license during installation.
- 4. Install Cloud Access Software on your host device and activate licenses.
- 5. Setup and verify the Cloud Access Connector, see <u>Setting up the Cloud Access Connector Server</u> and <u>Verifying the Cloud Access Connector Server</u>.
- 6. Download the Anyware Connector, see <u>Downloading the Anyware Connector</u>.
- 7. Obtain a Cloud Access Connector token, see Obtaining a Cloud Access Connector Token.
- 8. Install the Anyware Connector, see <u>Installing the Cloud Access Connector</u>.
- 9. Connect to the Anyware Manager Admin Console to manage your remote workstations and deployments, see <u>Connecting to the Anyware Manager Admin Console</u>.

Anyware Manager Deployment Scripts

HP Anyware has an open Github repository that contains a collection of scripts that simplify the setup, installation and usage of Anyware Manager. This repository enables users to set-up the necessary cloud resource (networking, firewalls, NAT gateway, storage buckets, etc), as well as Domain Controllers, Cloud Access Connectors and remote workstations from scratch to produce a working environment for testing and evaluation purposes.

Public Cloud Deployment Options

As an alternative to, or in addition to on-premises computer access, Cloud Access Software enables deployment of public cloud desktops on AWS, Google Cloud or Azure. For instructions on Azure, AWS or GCP deployments, consult the Anyware Manager Administration Guide. HP Anyware also hosts a micro-site for each public cloud partner where you can find additional valuable deployment guidelines.

PARTNER	HP Anyware MICROSITE
AWS	http://www.teradici.com/aws/
Microsoft Azure	http://www.teradici.com/microsoft/
Google Cloud	http://www.teradici.com/google/

For customers seeking cost flexibility using partial GPU options, the Azure NVv4 instances leverage AMD vGPU graphics which are available in fractions as low as 1/8 of a GPU. For more information, see the Cloud Access Software with Azure NVv4 Graphic Instance reference architecture.

Work-from-Home options for VMware Horizon

Anyware Zero Clients are certified for VMware Horizon can therefore be used in work-from-home scenarios.

VMware Horizon Work from Home

VMware have published an <u>excellent article</u> in Virtualization and Cloud Review online magazine on work from home strategies for VMWare Horizon customers.

If you currently operate a Horizon environment without home access to business resources, then additional configurations may be required. A typical environment that enables users to connect from home via a Anyware Zero Client to a VMware Horizon server requires the following:

- 1. Set up an internal View Connection Server.
- 2. Set up a replica View Connection Server which has been configured for external access.
- 3. Pair the replica View Connection Server with a <u>Security Server</u> which is exposed on the internet.
- 4. Finally, you need to complete the firewall rules for the View Connection Server.

5. Configure your Zero Client <u>session type to View Connection Server</u> and enter the IP address of the Security Server.

Work-from-Home options for Amazon WorkSpaces with Anyware Zero Clients

If your users are already using subscription-based Amazon WorkSpaces desktops, they can continue to use their Anyware Zero Clients from home without any client configuration changes. If users are switching from on-premises VDI desktops to Amazon WorkSpaces, the <u>session type</u> must be reconfigured to Amazon WorkSpaces before connecting to the desktop. All that is required is the registration code from the invitation email sent after creating your Amazon WorkSpace. Enter this code in the <u>OSD Amazon WorkSpaces session</u> page.

Future Disaster Recover (DR) Strategy and Planning

Many enterprises will be seeking to re-evaluate business continuity and disaster recovery planning once the pressing issues related to COVID19 have been addressed. HP Anyware has a <u>DR Planning Guide</u> and <u>customer stories</u> showing how to augment a VMWare Horizon deployment with public-cloud based DR resources.

Performance Tips for Work-from-Home Use Cases

Home users may be faced with last-mile bandwidth constraints, additional network latency and higher-than-usual packet loss compared to their office environment. A little tuning of PCoIP parameters may go a long way at optimizing user experience over challenging WAN conditions compared to the default settings which are optimized for corporate LAN conditions. The PCoIP Session Planning Guide provides detailed optimization guidelines, a few key optimization tips are listed here:

Network bandwidth reduction

The major contributors to network bandwidth associated with PCoIP traffic include frame rate, image quality and display resolution. These parameters may all be tuned by adjusting PCoIP policies for either Windows or Linux deployments.

Reducing the frame rate

Many Media and Entertainment users require 60 frames per second (fps) for an optimum content creation environment – while not ideal, many such users will tolerate 30 fps for most tasks; thereby halving the network bandwidth demand in some cases. Knowledge workers should generally tolerate a 24 fps limit and task workers should tolerate up to 16 fps.

Tuning image quality

PCoIP has a default (max initial) image quality of Q80, which is optimized for knowledge worker usage. Media and Entertainment users typically adjust this initial image quality upwards to Q90 under LAN conditions; by returning the setting to Q80, 20-30% bandwidth savings may be had dependent on use case. Further significant savings may be gained by reducing the max initial image quality to Q70 which might be appropriate for knowledge users or task workers.

Display resolution considerations

Because PCoIP transmits compresses pixels into the home environment, a reduced display resolution offers a direct reduction on network bandwidth. A user with a 4K/UHD display at home will see up to 50% peak bandwidth usage by setting a 2560x1600 resolution. For highly constrained low bandwidth networks, consider adopting a single monitor configuration.

Adopt chroma-subsampling

For customers using Anyware Graphics Agent in conjunction with NVIDIA Quadro vDWS deployments, consider switching to PCoIP Ultra for GPU Optimization and configuring chroma-sub-sampling to YUV 4:2:0. For video playback use cases, using H.264 with chroma-subsampling can reduce network bandwidth by up to 75% over default LAN settings.

Build-to-lossless

Turn off the Build to lossless image quality setting to limit network bandwisth consumption.

Video editorial vs. Text editorial use cases

Optimizing for video editors

Users involved in heavy video editorial work will accomplish bandwidth savings by switching to PCoIP Ultra for GPU Optimization and configuring chroma-sub-sampling to YUV 4:2:0 – this is because video content is generally already compressed in YUV 4:2:0 format so no further quality degradation is noticed. However, text and fine line details are subject so some distortion.

Optimizing for text editors

Task workers involved in text-oriented operations will achieve highest bandwidth efficiency adjusting the default PCoIP settings using the bandwidth reduction strategies discussed above. PCoIP presents text as a lossless reproduction which not only reduces eye strain but is very bandwidth efficient by design.

Addressing packet loss

If packet loss is higher than the recommended 0.1% or home users are complaining about occasional display stuttering, adjust the bandwidth floor to somewhere between 5 Mbps and 50 Mbps dependent on severity.

Dealing with increased latency

A small loss in interactivity is a natural consequence of users accessing the datacenter remotely compared to LAN connectivity. However, in-region latency should rarely be problematic unless there are underlying network problems. If users are using PCoIP from laptops, home PCs or thin clients, be sure these devices have sufficient CPU resources for the use case at hand.

Windows Updates Degradation

Background Windows updates can cause a temporary degradation in interactivity, especially in the case of low-performance PCs as endpoints.

Working over home Wifi Networks

To achieve the highest user experience, HP Anyware recommends using wired ethernet connections to home PCs and laptops. Wired connections offer less congestion, resulting in lower packet loss, and less fluctuation in network latency than wifi networks. However, PCoIP generally works well over wifi networks, especially for task and knowledge worker use cases. If a user experiences sporadic display freezing or unpredictable interactivity, you need to set a bandwidth floor of at least 10,000 kbos to compensate for packet loss. Additional details are provided in the PCoIP Session Planning Guide.

Working from home with low performance endpoint devices

When using a home PC or laptop configured with a Anyware Software Client for macOS or Windows, HP Anyware recommends at least 1.6 GHz dual core Intel Core-i5 processor (2011 era or newer) equivalent configured with 4 GB of RAM or higher to support a knowledge worker use case with dual

HP Anyware Work From Home Guide Additional Resources

1080p displays. Some thin clients or endpoint devices with Ubuntu 18.04 in conjunction with Anyware Linux Client 2020.04, can be configured to take advantage of PCoIP Ultra GPU Optimizations.

For information on configuring the Anyware Client H.264 hardware decode on the Anyware Client, see the following:

- H.264 hardware decode configuration on Linux Client.
- H.264 hardware decode configuration on Linux Client.

Once this as been configured, this will provide an upgraded network bandwidth efficiency and higher frame rates even when the CPU has limited performance specifications.

Wacom device local termination

Artists using Wacom devices are particularly sensitive to interactive latency. If your artists are used to using PCoIP in LAN environments without 'local termination' enabled, be sure to reconfigure the deployment and enable 'local termination' as per instructions in the Anyware Agent and Anyware Client administration guides.

Enabling Enhanced Audio/Video Synchronization

This client side setting available on Anyware Software Clients is useful for video editorial applications such as Avid Media Composer or Adobe Premiere Pro. Enhanced A/V Sync reduced the delay between the audio and video channels which offers improved lip sync while also reducing the number of cropped video frames during playback operations. For more information on enhanced A/V sync, see here.

Additional Resources

Performance Considerations - What bandwidth per user? For information on HP Anyware's sample bandwidth and network settings and policies, see here.

Telework Security Guidelines As published by NIST here.

Enterprise VPN Security Alert As published by the US Department of Homeland Security (CISA) here.

HP Anyware Work From Home Guide How To Buy

Additional HP Anyware Documentation The <u>resources</u> section of the HP Anyware Website includes a wealth of information including whitepapers, datasheets, reference architectures, solution briefs, webinars, blogs and much more.

- Cloud Access Software Customer Stories
- Solution Briefs
- Reference Architectures
- Cloud Access Architecture Guide
- Cloud Access Session Planning Guide
- Cloud Access Software Technical Documents

How To Buy

To get started immediately, Cloud Access (standard) or Cloud Access Plus (graphics) licenses can be purchased by credit card from the HP Anyware <u>website</u>. For larger deployments, please contact <u>HP Anyware Sales</u> or a <u>HP Anyware reseller</u>.